



6320 E Stassney Ln. Phone / 1.800.615.8350  
Austin, TX 78744 Email / [sales@feniex.com](mailto:sales@feniex.com)



## Quantum Software

### How to Program Cut Off

Programming cutoff or module disable is really simple and straightforward with the Quantum Configurator. For starters, I'll select the input I wish to program, then I'll select cutoff. Now cutoff could be a front cutoff, disabling all front modules, like that for example. Or cutoff could be a rear cutoff, disabling all rear modules. Another way cutoff could be used is to disable the modules located on the driver's side or passenger side when that door is open. If you tied input 13, for example, to a door trigger, it will disable the modules flashing on the left driver side. You could also do that step, of course, in the passenger side. So Cutoff is a really straightforward function. Select the input, the Cutoff tab, and any modules you wish to disable once that input is activated. That concludes how to program Cutoff using the Quantum Configurator.