



6320 E Stassney Ln. Phone / 1.800.615.8350  
Austin, TX 78744 Email / [sales@fenix.com](mailto:sales@fenix.com)



---

## Quantum 2.0

### How to Wire & Service Inner Lightbar

Wiring and servicing Your interior light bar is pretty similar to the Stick Light series. Let me show you how that's done in this video. Every Interior Light Bar comes with an 8-ft 14 pin harness. 2 wires that connect to your serial USB module, 2 wires that go to your battery and 10 mode wires in the event you need to service a module. Doing so is pretty straightforward. You have 4 small screws that secure the top cover in place. Remove these 4 small screws. Once that's done, remove the top cover from the bar. Locate the module you wish to service and remove the screws. Disconnect the module from the bar. Reattach your functioning module and screw it in place.

Reattach the top cover back onto the frame and then screw the top cover in place. Before you wire up your bar in your vehicle, you first need to configure it and program it accordingly. To do so, you need to apply power to your red and black wire and plug in your USB module into the computer. That's the way you program the 10 available modes. We'll learn about how that's done in the next video.