



6320 E Stassney Ln. Phone / 1.800.615.8350  
Austin, TX 78744 Email / [sales@feniex.com](mailto:sales@feniex.com)



---

## Q Series

### How to Program Q Serial Flood Mode

Takedowns work lights, floodlights alleys, they're all different terminology used when a module is illuminated in white at full intensity. I'm gonna show you how you program that using the Q Link software program. So I'm gonna start by programming all 6 modules to a single zone, and then I'm gonna program Input 1 to turn on all these modules at full intensity white. I'll start by connecting my zone programming wire, which is Input 28 to power. I now select my input tab, select the input I wish to program, click flood, select my zone, Zone 1 that I programmed all 6 of those lights to, and set that to white on Input 2. I could select any color actually on a flood light. So I'll select Input 1 and go red. Oh, Input 2. I mean, I'll select Input 3 and go Amber. And Input 4, flood and green. I'll program my device. I'll now activate live mode Input 2, Input 3, Input 4. That concludes how you set a module to a zone and then program that zone to any flood mode color you desire.