



Fenix University  
fenix.com/university/

Fenix

Interior Visor Light Instruction Manual  
1.800.615.8350 / fenix.com



## INTERIOR VISOR LIGHT

VL-3025-\*\*



Specifications ►  
pp. 03

Wiring Guide ►  
pp.03

Patterns & Modes ►  
pp.03

Wiring Instructions ►  
pp.04



**Fenix Product Copyrights** This price list and the mentioned Fenix products include or describe copyrighted Fenix material. Laws in the United States and other countries preserve for Fenix Industries and its licensees certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Fenix and its licensors contained herein or in the Fenix products described in this Price List may not be copied, reproduced, distributed, merged or modified, transmitted, transcribed, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior written permission of Fenix Industries, Inc. Fenix and the stylized Fenix logo are registered in the U.S. Patent & Trademark Office.

## SAFETY REGULATIONS & WARRANTY

### Safety Regulations

The following provides all the information necessary to safely operate the previously listed products of Feniex Industries, Inc. Please read this manual thoroughly before installing or operating your new product in order to prevent any damage or injury. Failure to follow the listed instructions in this manual may result in damage to your products or personal injury.

- Proper installation of this product requires good knowledge of automotive systems, electronics and procedures.
- Please guarantee all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. Check all sides of the mounting surface before drilling any holes into the vehicle.
- Do not install this product in any way that interferes with the deployment of the air bag. Doing so may damage the effectiveness of the air bag and can lead to serious personal and vehicle injury. The installer will assume full responsibility of proper installation of the new unit.
- Please clean the mounting surface before installation of the unit when using tape, brackets, magnet, Velcro or suction cups.
- The product's ground wire must be connected directly to the Negative (-) battery post for effective use of the unit. Please follow all wiring guidelines provided to guarantee long lifespan and productivity. Failing to follow these instructions may result in damage to the product.

### Warranty

Feniex Industries, Inc. warrants to the original purchaser that all our products shall be free from defects in material and workmanship. Feniex Industries' speakers, sirens, rocker panels, AM600 Beacons, Torch Lights, AI lightbars, AI Cubes, AM900 Work Lights, 8.5" Dome Lights, Cargo Lights, flashlights, Remote Spot Lights, and controllers are warranted for 2 years from the manufacturing date. In addition, all other products are warranted for 5 years from the manufacturing date.

If a warranty problem occurs, please contact customer support at 1.800.615.8350 or visit the website at [www.feniex.com/support](http://www.feniex.com/support).

If the product needs to be returned for repair or replacement, call our customer support line to receive a return merchandise authorization number.

Operational times are from 9 a.m. to 6 p.m. central time, Monday through Friday. Please do not send in product without contacting support first for an RMA number.

### Service After Expiration

Feniex Industries will still provide service for all products after the expiration of the warranty. In some instances it may be necessary for the product to be shipped, freight prepaid, and insured for loss or damage to Feniex headquarters.

***Warning!** Utilizing non-factory screws and mounting brackets may result in loss of warranty coverage.*

### Copyright

This instruction manual and the Feniex products described in this instruction manual may include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute, and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this instruction manual may not be copied, reproduced, distributed, merged, or modified in any manner without the express written permission of Feniex Industries, Inc.

### Feniex Product Copyrights

The products described in this document are the property of Feniex Industries, Inc. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement. Products and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the product or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior permission from Feniex Industries, Inc.

## BOX CONTENTS

- 1x - Interior Visor Light
- 1x - Velcro Mounting Straps\*
- 2x - Replacement Glass Fuses

\*These items are attached to the product.

## WIRING GUIDE

### Cigarette Plug

1. Plug in the cigarette plug into the 12V adapter of your vehicle to power your unit.
2. To switch to hardwire, cut off the cigarette plug and route the Red and Black wires to the Positive and Negative terminals on the vehicle's battery.

### Power Buttons

1. There are two power buttons on either side of the unit.
2. Press either button once to power on.
3. Press either button once to power off.

### Flash Pattern Buttons

1. There is an LED indicator numbering your flash pattern selection.
2. Press Next button to cycle patterns in ascending number order.
3. Press Previous button to cycle patterns in descending number order.
4. Non-Volatile memory recalls the last

## SPECIFICATIONS

<b>DIMENSIONS</b>	12" x 3.6" x 0.75"
<b>VOLTAGE</b>	12VDC
<b>CURRENT</b>	0.7 Amps @ 12V
<b>WARRANTY</b>	2 Years

## WIRING GUIDE

The Interior Visor Light comes as standard with a cigarette plug. To switch to hardwire, cut off the cigarette plug.


WIRE	FUNCTION
Red	12V+
Black	Ground (-)

*Important! All cables except Black (-) contact +12VDC.*

## MODELS

Available in 7 color variations.

Blue	Amber/Blue
Red	Amber/White
Red/White	Amber/Green
Red/Blue	

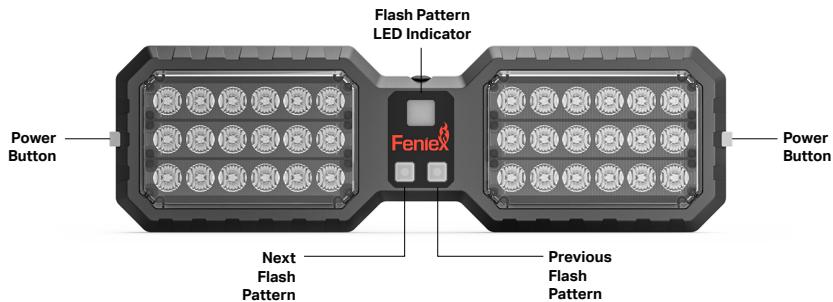

## ▲ PATTERNS

1 Slow/Fast Single Accel	9 Slow Quad Alt	17 Slow Triple
2 Single Half/Full Combo	10 Quad Alt	18 Triple
3 Slow Single Alt	11 Fast Quad Alt	19 Pulse
4 Single Alt	12 Strobe Alt	20 Fast Pulse
5 Fast Single Alt	13 Single Alt Accel	21 Single Accel
6 Slow Triple Alt	14 Slow Alt Accel	22 Full/Alt Accel
7 Triple Alt	15 Slow Single	23 Side A Steady/B Single
8 Fast Triple Alt	16 Single	24 Side B Steady/A Single

## ▲ MOUNTING INSTRUCTIONS

### ■ Sun Visor Mounting

**Important!** Make sure not to damage any vital parts of the vehicle or mounting surface. Do NOT mount anywhere that interferes with the vehicle air bag coverage.



1. Unfasten the velcro straps on the unit.
2. Flip down the sun visor in the vehicle.
3. Secure the unit to the sun visor using the Velcro straps, ensuring the light faces forward and emits through the windshield when the visor is down.