


# ONE

**CONTROLLER | SIREN | FLEET MANAGER**

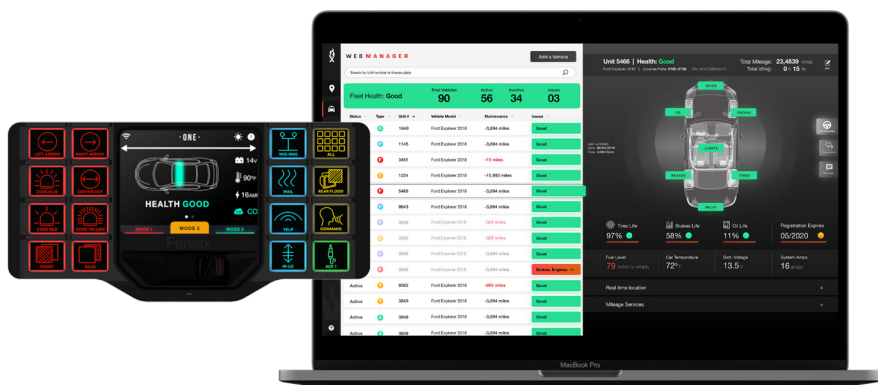

## FENIEX ONE CONTROLLER

*QUICK REFERENCE GUIDE*  
**F1-0121**

**Feniex University** ▶  
pp. 03

**Box Contents** ▶  
pp.04

**Equipment Dimensions** ▶  
pp.05

**Specifications** ▶  
pp.06



**Feniex Product Copyrights** This price List and the mentioned Feniex products include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this Price List may not be copied, reproduced, distributed, merged or modified, transmitted, transcribed, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior written permission of Feniex Industries, Inc.. Feniex and the stylized Feniex logo are registered in the U.S. Patent & Trademark Office.



# SAFETY REGULATIONS & WARRANTY

## Safety Regulations

The following provides all the information necessary to safely operate the previously listed products of Feniex Industries, Inc. Please read this manual thoroughly before installing or operating your new product in order to prevent any damage or injury. Failure to follow the listed instructions in this manual may result in damage to your products or personal injury.

- Proper installation of this product requires good knowledge of automotive systems, electronics and procedures.
- Please guarantee all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. Check all sides of the mounting surface before drilling any holes into the vehicle.
- Do not install this product in any way that interferes with the deployment of the air bag. Doing so may damage the effectiveness of the air bag and can lead to serious personal and vehicle injury. The installer will assume full responsibility of proper installation of the new unit.
- Please clean the mounting surface before installation of the unit when using tape, brackets, magnet, Velcro or suction cups.
- The product's ground wire must be connected directly to the Negative (-) battery post for effective use of the unit. Please follow all wiring guidelines provided to guarantee long lifespan and productivity. Failing to follow these instructions may result in damage to the product.

## Warranty

Feniex Industries' speakers, sirens, rocker panels, AM600 Beacons, Torch Lights, AI lightbars, AI Cubes, AM900 Work Lights and controllers are warrantied for 2 years from the manufacturing date. In addition, all other products are warrantied for 5 years from the manufacturing date.

If a warranty problem occurs, please contact customer support at 1.800.615.8350 or visit the web site at [www.Feniex.com](http://www.Feniex.com). If the product needs to be returned for repair or replacement, call our customer support line to receive a return merchandise authorization number.

Operational times are from 10 a.m. to 5 p.m. central time, Monday through Friday. Please do not send in product without contacting support first for a RMA number.

## Service After Expiration

Feniex Industries will still provide service for all products after expiration of the warranty. For any issues, call the customer support line. In some instances it may be necessary for the product to be shipped, freight prepaid and insured for loss or damage to Feniex headquarters.

**Warning!** Utilizing non-factory screws and mounting brackets may result in loss of warranty coverage.

## Copyright

This instruction manual and the Feniex products described in this instruction manual may include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Feniex Industries, Inc.

## Feniex Product Copyrights


The products described in this document are the property of Feniex Industries, Inc. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement. Products and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the product or documentation may be reproduced, transmitted, transcribed, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior permission from Feniex Industries, Inc.

## FENIEX UNIVERSITY

Visit Feniex University to learn how to install, program and mount your Feniex One.



<https://feniexuniversity.com/>  
Visit Feniex University to watch in-depth tutorials on the topics listed below:

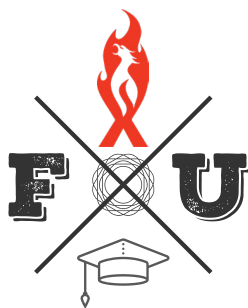

### **CONTROLLER & RELAY VIDEO TOPICS:**

Introduction to the Feniex One controller and relay

What comes with the Feniex One?

Mounting the controller and relay

The functionalities of the controller

Functionalities of the siren relay

Wiring up and powering the Feniex One

Servicing the Feniex One?

Understanding the software interface

Programming the 21 button and slide switch

Programming the 8 inputs

Programming the OBD2 plug-in

Programming the 32 outputs

Programming the dual-tone 200W siren

Programming and wiring the Quad Serial port

Programming the data link ports

Programming the global vehicle sync

### **SOFTWARE VIDEO TOPICS:**

Understanding the Fleet Manager

Understanding the Fleet Tracker




**BOX CONTENTS**

Component	Quantity
Feniex One Relay	1
Feniex One Controller	1
Antenna	1
USB Cable	1
Ethernet Cable	1
U-Bracket	1

Component	Qty.
Button Legend Sheets	4
16 pin Wire Harness	3
8 pin Wire Harness	3
6 pin Wire Harness	1
Power Cable Harness	1



Relay	8" x 6.25" x 2.44"	Controller	7.25" x 1.5" x 3.13"
-------	--------------------	------------	----------------------

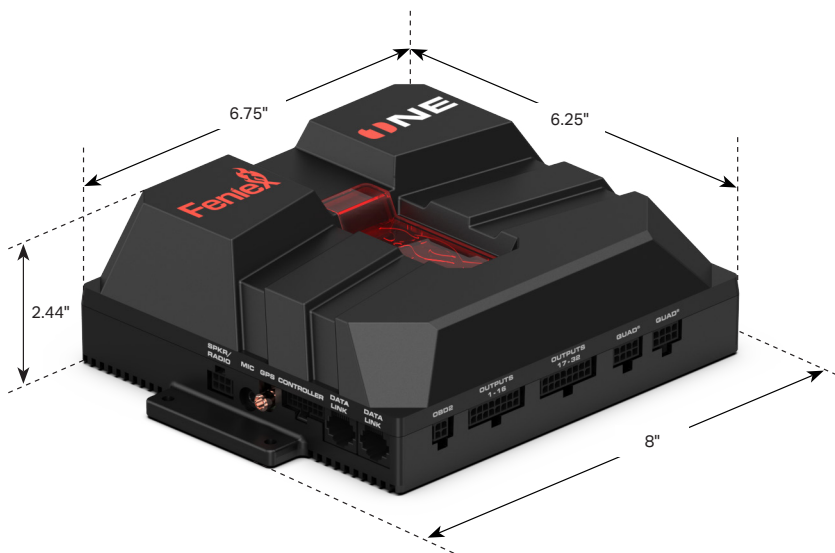



## ▲ SPECIFICATIONS

Warranty	2 years
Input Voltage	9-16 V DC
Current Draw	80 Amps
Built-in Relay	Yes
Standby Current	1 Amp
Fuse	125% circuit load

### PROGRAMMABLE INPUTS:

There are 8 inputs and 32 outputs on the relay. Input 1 is a system input for dedicated ignition.

### AMPS PER OUTPUT

Each output is rated at 5 Amps.

### AMPS PER BLOCK

There are 15 Amps per block of outputs:

**Block 1:** Outputs 1-8


**Block 2:** Outputs 9-16

**Block 3:** Outputs 17-24

**Block 4:** Outputs 25-32

### MAXIMUM OUTPUT

The maximum output is 60 Amps with all outputs.

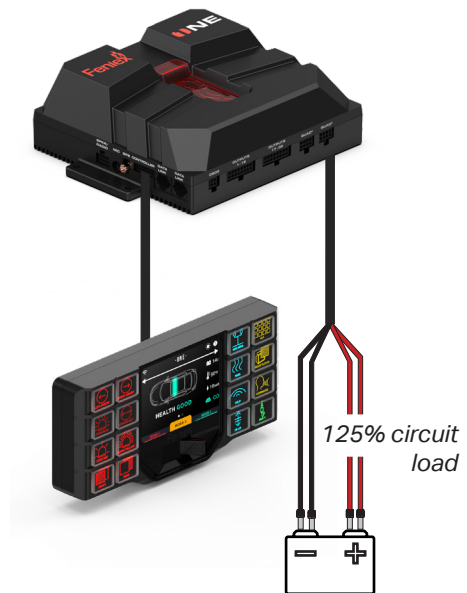

## SIREN TONES

1	Wail
2	Yelp
3	Yelp Fast
4	Phaser
5	Horn
6	Mechanical
7	Manual Wail

8	High Low
9	PCall Slow
10	PCall Fast
11	Horn Phaser
12	Horn Yelp
13	Phaser Yelp
14	Test Tone

## VOICE COMMANDS & MISC.

1	Step Out
2	Step Out with Hands Up
3	Remain in Vehicle
4	Remain in Vehicle Windows Down

5	Move Out
6	Pull Over
7	Cops Song
8	Ecto Tone



*Feniex One Relay  
and 200W Siren*



*2x 100W  
Speakers*