

WIDE LUX 6x4


MOUNTING INSTRUCTIONS:

1. Place the unit against the selected mounting surface.
2. Mark the areas where the mounting holes will be drilled. If the mounting surface is part of the vehicle, make sure no vital components could be damaged by the drilling process.


3. Drill two mounting holes in the marked surface, as well as a 0.5" diameter hole for wire passage (if mounting on a vehicle). Use the rubber pad to position the 0.5" hole for the wires. Make sure to deburr holes thoroughly. Use a grommet if needed.

4. Pass the wires through the 0.5" diameter hole, and secure the light head to the mounting surface with the provided hardware.

Important! Print document in actual size. Do not shrink page to fit when printing.

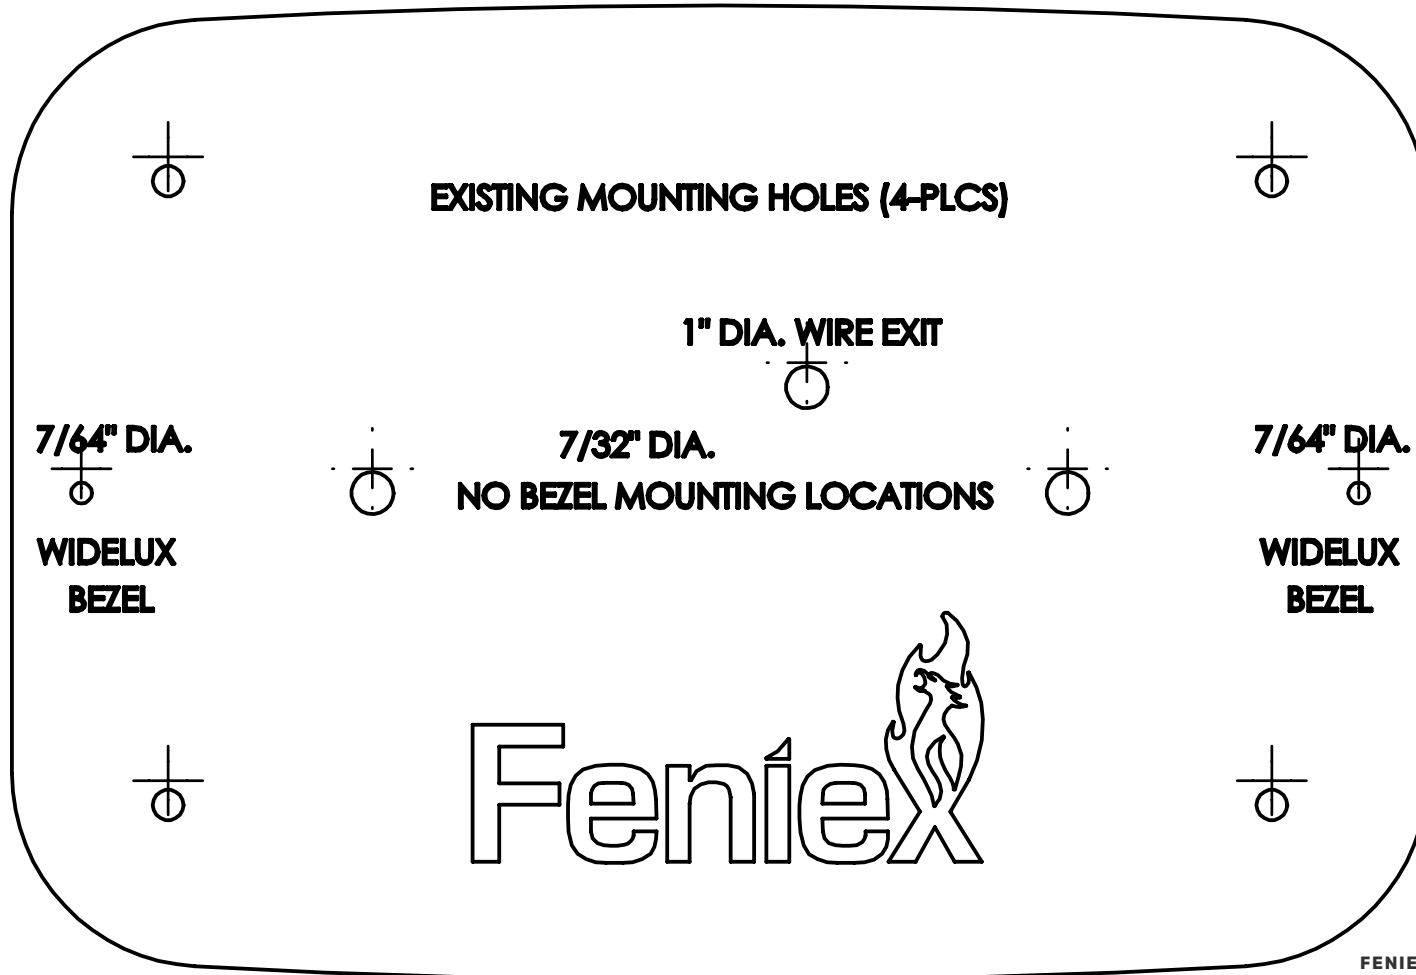

WIDE LUX 7x3

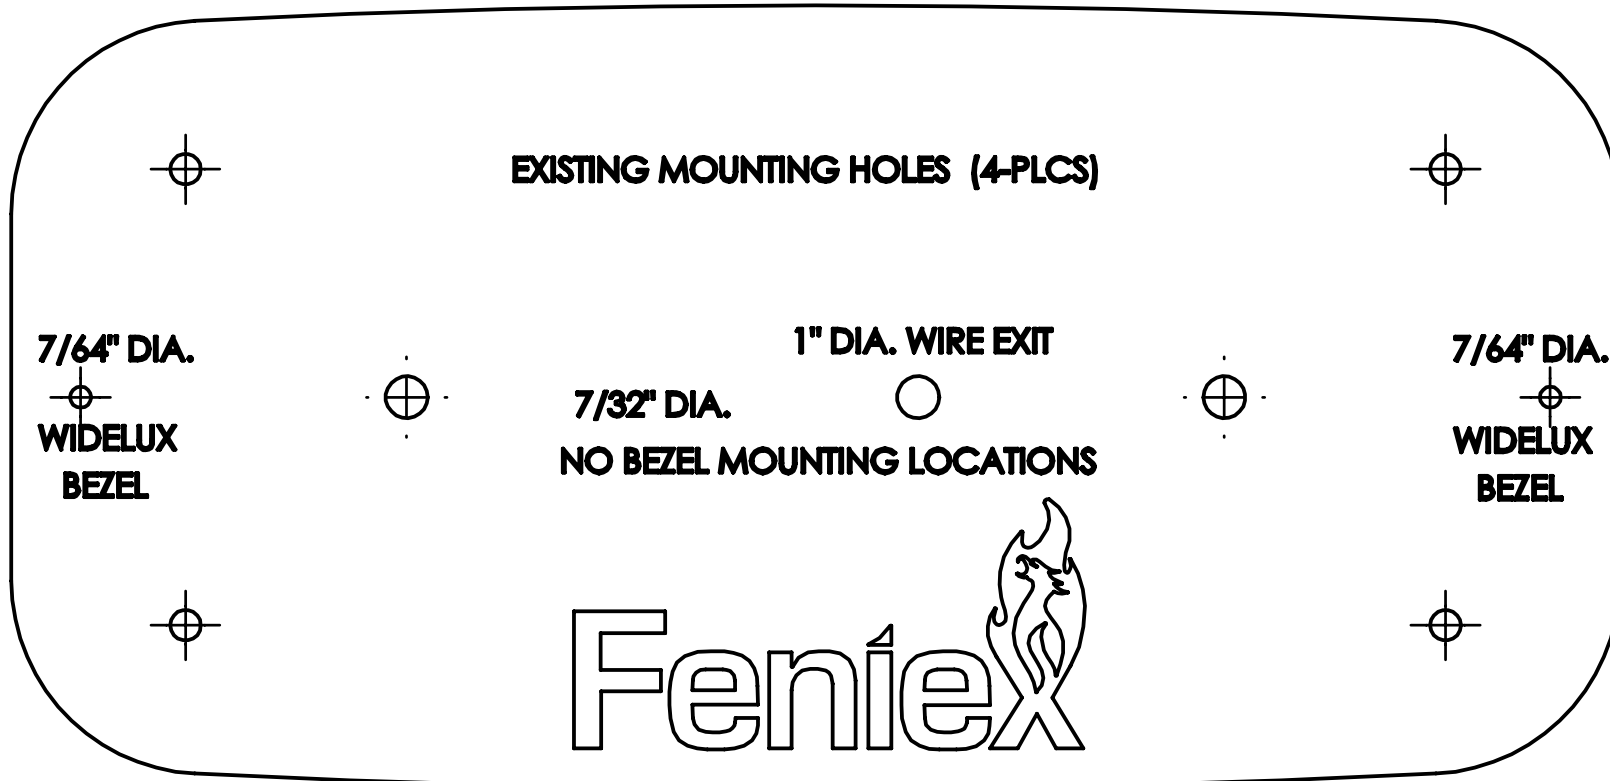

WIDE LUX 9x7

EXISTING MOUNTING LOCATIONS (4-PLCS)

1" DIA. WIRE EXIT

7/32" DIA.

NO BEZEL MOUNTING LOCATIONS

WIDELUX BEZEL MOUNTING 7/64" DIA.

WIDELUX BEZEL MOUNTING 7/64" DIA.

FenieX